

BLUETOOTH SPEAKER USER INSTRUCTIONS

NOTE:

1. Wireless Standard: V5.0
 2. Output Power: 5W*2
 3. Frequency Range: 100Hz-20KHz
 4. Connection Range: $\geq 10m$
 5. Battery Type: 18650 Built-in Lithium Battery 3.7v
 6. Battery Capacity: 2000mAh
 7. Charging Request: DC 5v 1A
 8. Charging Time: About 4 hours
 9. Product Size: 183x60x61mm
 10. Weight: 620g
 11. Accessories: Manual/Cable/Lanyard
 12. Package: Packaging Box + Accessories Box+ Pe Bag
1. Please fully charge the battery after purchasing this product. Lithium ion batteries should never be allowed to completely discharge. Periodical charging (every month) is recommended, even when the speaker is not being regularly used.
 2. It is not necessary to use force on the rubber buttons. You will hear a mechanical click when the button operates. Some functions will take up to 0.5 seconds to activate. Please use DC 5V 1A for charging. Do not use fast charging devices.
 3. Keep the speaker free from dust, lint etc
 4. The speaker cannot be outdoor exposure to the sun (It is dangerous for the battery to be under harsh sun)
 5. This speaker is designed for indoor use. Exposure to direct sunlight and subsequent high temperature may create a hazardous battery condition.

DIRECTIONS FOR USE:

1. Press the power button for 3 seconds, the device will start in Bluetooth mode. search for "V13" to pair with another device. The unit will automatically reconnect to the last paired audio device, when both devices are turned on.
2. TWS Connection. Turn on two speakers. Press and hold the M button for 3 secs.(Please refer to the Button Instructions) The speaker will pair to each other. Search model V13 to connect and pair.
Note: The speakers will automatically reconnect to each other and to the last paired Wireless audio device when both units are turned on. Long press the M button again to cancel the TWS mode.
3. Press the "+" button for more than 1 second to increase volume. Press this button momentarily to step forward one track in the playlist.
4. Press the "-" button for more than 1 second to decrease the volume. Press this button momentarily to step backwards one track in the playlist.
5. Momentarily press the Play/Pause button to toggle between these 2 functions. When receiving a phone call momentarily press this button to answer. Momentarily press the button again to hand up. Double pressing this button will cause you to redial the last number in your phone. Pressing this button for 3 seconds will disconnect an incoming call.
6. Momentarily pressing the "M" button allows you to select Bluetooth, SD card (when an SD card is inserted) or USB input. Inserting a cable into the AUX socket will automatically select AUX mode.
7. This device uses a USB type C charging cable (supplied). During charge, the LED will show a solid red indication. When the unit is fully charged the LED will be off.
8. If this unit does not connect to any device within 5 minutes it will turn off to conserve battery endurance.

NOTE: Charger must be DC 5V 1A. **DO NOT USE OTHER FAST CHARGER**

